

Belt Gauge (Art. 1705)

PRO +



- for adjusting initial tension of the drive belt
- can be used for all types of cars as far as information on recommended tension are available
- one rotation of the adjusting nut
- >piston load of approx. 10N
- tension can be read on front and back of the tool

Technical modifications reserved - we are not responsible for issues while printing