

Bearing Ring Removal Tool for Ford Transit (as of 2006) (Art. 9220)



- for removing the inner bearing ring on wheel hub
- suitable for Ford Transit with front wheel drive
- to be used with front wheel bearing puller (BGS 8707)
- includes following tools:
 - half shells, to grip the bearing ring
 - 3 connecting bolts, to connect the half-shells with tool BGS 8707
 - screw / nut / washer set, to connect the half shells

Technical modifications reserved - we are not responsible for issues while printing